Holme

5KG Kitchen Scale

User manual

Model number: HESC1W & HESC1B

Please read these instructions carefully and keep them for future reference

For Customer Services & Spare Parts please call **0845 209 7461**
Opening times: Monday - Friday 9am – 5pm & Saturday 9am – 1pm or visit us at **www.productcareuk.com**

Precautions

Important safety instructions:-
When using this appliance, basic safety precautions should always be followed.

Read and Retain instructions: All operating instructions, safety for the user and others should be read before operation and retained for future reference.

The manufacturer doesn't represent this product as waterproof, please do not expose this unit to water, rain or moisture.
This unit is for household use only, it isn't designed for commercial/industrial or medical use.
Please only use for its intended purpose.
Attention should be drown to the environmental aspects of battery disposal.
Warning: The batteries are not to be exposed to excessive heat such as sunshine, fire or the like.
Warning: DO NOT disassemble this scale. The scale does not contain any parts that are serviceable by the user.

How to Operate

The batteries (CR2032 X 2) are pre-installed at the backside of the scale.
Remove both pull tabs to allow power to the unit.

To replace the batteries in the unit please take the following steps:

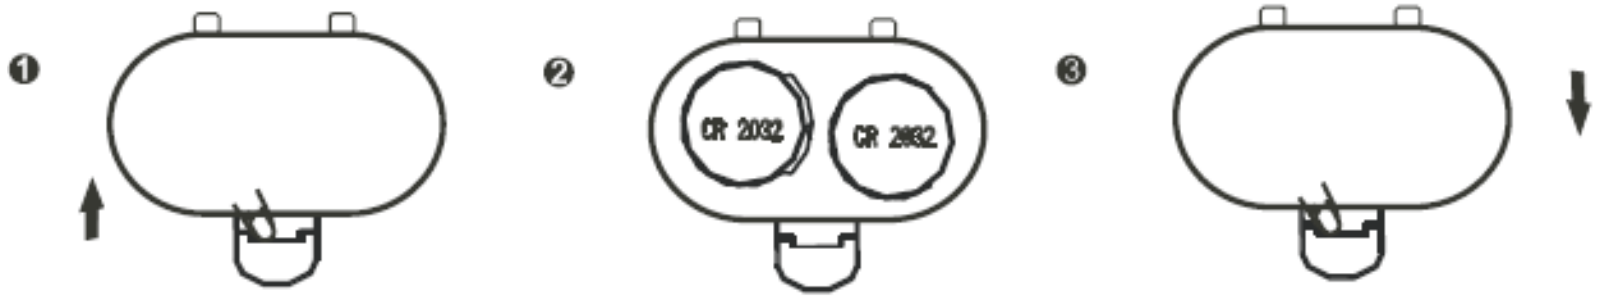

1. Remove the small screw on the battery cover and open the battery cover.
2. Remove and replace the current installed CR2032 X 2 batteries.
3. Close the battery cover and place the screw back into the battery cover.

How to Operate

Before you turn the unit on, place the unit on at hard even table.

Press the **POWER/RESET** button once to turn the unit on, the units display will all light up for a few seconds whilst it calibrates and sets at default "**0g**".

If the display is not "**0g**", you can press the "POWER/RESET button to tare it. (this takes about 2seconds to respond)

When the **0g** appears, you can press the UNIT button to select the weight unit between **g, kg oz or lb:oz.**

Note: If you wish to measure in **ml** please use the **g** units as **ml = g.**

How to Operate

Place the food in a bowl or on the unit (you can tare the bowl) and the scale will display the value.

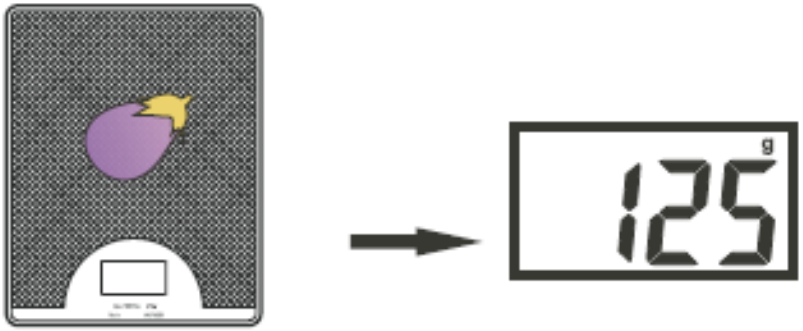

After you have finished weighing, you can press and hold the **POWER/RESET** button to turn off the scale or the scale will automatically shut off after 120 seconds.

Note: weight limit of this scale is up to **5kg** or **177oz**

Troubleshooting

If you experience any difficulty in use of the scale:

1. Check the batteries are correctly fitted.
2. Check whether the scale is on a hard flat, level table and not touch against anything, i.e. a wall.
3. Ensure you do not weigh until the display shows **0g**.
4. If you press the **POWER/RESET** button and either no response or “Lo” IS DISPLAYED – TRY 2 x CR2032 new batteries.

Replace battery

5. If “0-Ld” is displayed, the scale has been overloaded.

Weight overload

For Customer Services & Spare Parts please call **0845 209 7461**
Opening times: Monday - Friday 9am – 5pm & Saturday 9am – 1pm or visit us at **www.productcareuk.com**

Specification

WEIGHTING CAPACITY	:5 kg OR 177 oz.
WEIGHTING UNIT	:g, kg, oz., lb:oz.
TEMPERATURE RANGE	:+5C ~ + 35C
BATTERY	: 2 X CR2032 BATTERIES.

Guarantee

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.

- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which has been supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

For Customer Services & Spare Parts please call **0845 209 7461**
Opening times: Monday - Friday 9am – 5pm & Saturday 9am – 1pm or visit us at **www.productcareuk.com**

For Customer Services & Spare Parts please call
0845 209 7461
Opening times: Monday - Friday 9am – 5pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Revision 1

This symbol is known as the 'Crossed-out wheelie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/ electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.